




Quick start guide


WIFI MODULE

Quick start guide


WIFI MODULE

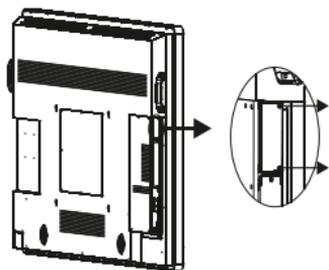

1. Remove the screws and take the plate out. Keep the screws in a safe location, as you will need them later on.

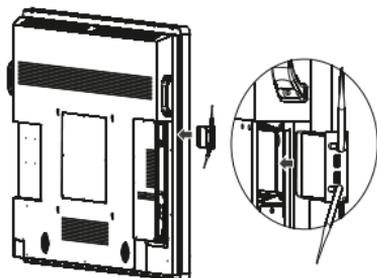

2. Tighten the Wi-Fi antennas in clockwise direction and insert the Wi-Fi module in the Wi-Fi slot.

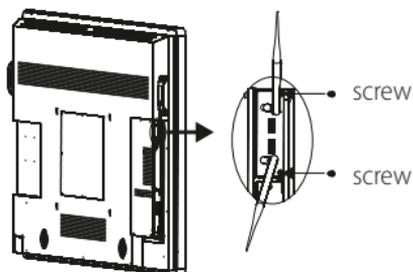

3. Fasten the Wi-Fi module by turning the screws back in place.

For further information, please visit our help centre: support.ctouch.eu