

OPERATING THE FLOAT BAR



Setting the alarm clock

All applications

	Display menu		Previous screen		Annotation tool
	COS™ menu		Home page		Volume bar
	Source menu		Application history		Backlight mute function
	User Manual				N/A

Note: It can happen that icons in the Float Bar are greyed out. This means that these functions are hidden/locked. There is nothing wrong with the display itself. If you want to get access to these functions, please contact your ICT contact person or dealer.

REMOTE CONTROL

Switch the CTOUCH interactive display power on or off.

Confirm or enter a sub-menu or toggle between options during menu operation.

Display desktop (Home page) on the screen.

Display or exit the setting menu screen.

Mute the sound.

Freeze the current picture.

Volume down.



Display or exit input source menu.

Use the Arrow buttons to navigate in on-screen menu.

Return to previous menu or exit the on-screen menu.

Turn off the picture on the CTOUCH interactive display and listen to the program audio only.

Volume up.

Take a screenshot and store the data onto your connected USB storage device.
Note: If there is no USB storage device plugged into the device, the screenshots will not be saved.

QUICK START GUIDE




ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.




CTOUCHimp01066v150912

CONTROL PANEL

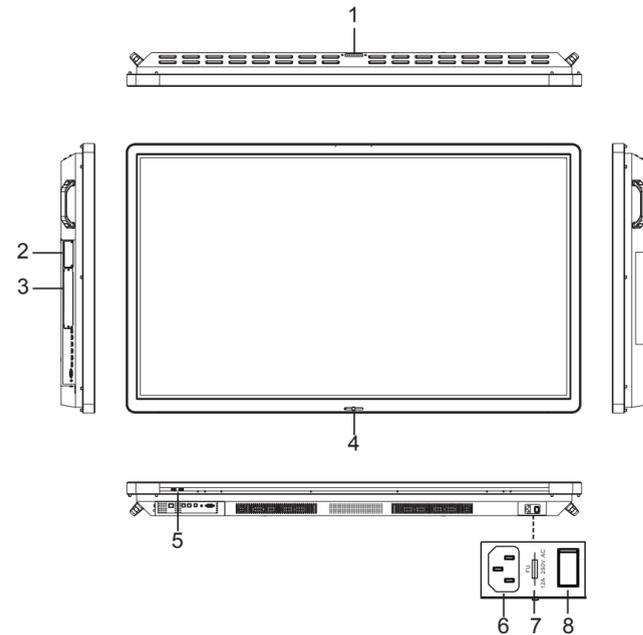

nr.	Description
1 USB(2.0)(for camera)	This port is for connecting a camera. Notes: 1. Please open the dust cover before being used. 2. It can perfectly support cameras up to 720p.
2 Wi-Fi module slot	Insert a Wi-Fi module (Optional).
3 OPS module slot	Insert an OPS module (Optional).
4 Power LED	Red: In standby mode. Blue: In power on mode.
Remote control sensor	Aim the remote control towards this spot on the CTOUCH interactive display.
Power	Press to switch the CTOUCH interactive display on or off. Note: When the CTOUCH interactive display is turned on, press the button in the middle to show the Float Bar. Press the button for about 2 seconds and the screen will go into stand-by mode.
5 USB	Connect USB devices to this port for OPS and COS™.
6 AC IN	Plug the AC cord into this jack and into a power outlet. (AC 100-240V 50/60Hz)
7 Fuse	12A 250V
8 Power Switch	Push (I) to turn on the power, push (O) to cut off the power. Note: Don't cover the power switch.

CONNECTION PANEL

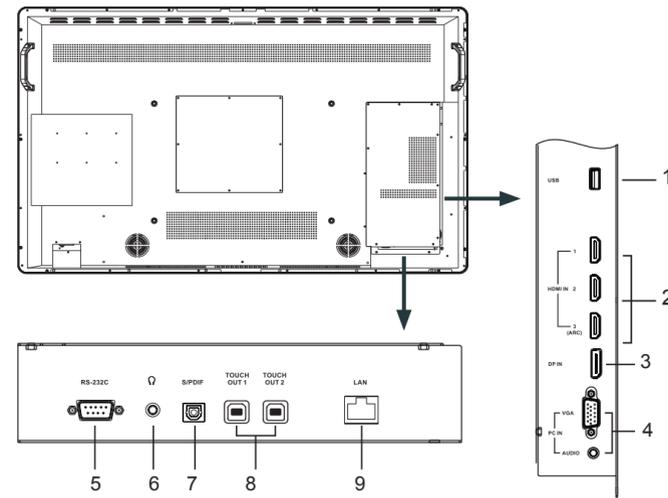

nr.	Description
1 USB	Connect USB devices to this port for the OPS or COS™. Note: use this USB-port for software updates.
2 HDMI1/2/3 IN	Connect an HDMI or DVI device to this HDMI port. HDMI3(ARC): Connect an ARC-enabled home theater receiver to this HDMI port.
3 DP(DisplayPort) IN	Connect a DP device to this DP port. Note: The current selected source is audible.
4 PC IN	Connect the video/audio of a computer to these ports.
5 RS-232C	For remote control, service and other uses.
6 SPDIF digital audio OUT	Connect headphones to this jack. The current selected source is audible.
7 SPDIF digital audio OUT	Connect a digital sound system to this SPDIF jack.
8 TOUCH OUT 1/2	Output for external devices connected to PCx, HDMIx or DP ports, which support touch systems.
9 LAN	Connects the external network or router.

Note: If the CTOUCH display is on the VGA source and does not get any signal, it will go into stand-by mode after two minutes. When the CTOUCH display is on others sources and does not get any signal, it will go into stand-by mode after 10 minutes.

POWER ON / OFF

TURNING THE CTOUCH INTERACTIVE DISPLAY ON OR OFF

1. Plug the power cord into an AC power outlet.
2. Switch the Power Switch on, to turn the CTOUCH interactive display on.
3. The display is in standby mode now. Wait a moment until the power indicator lights up, then press to turn on the CTOUCH interactive display.

NOTE: Be sure to wait for a few seconds before pressing button. If you promptly press the CTOUCH interactive display may act wrongly or not respond at all.

4. Press button again to put the display in standby mode.
5. Switch the Power Switch off, to cut off the power completely.

CONNECTIONS

- Make sure both the external device as well as the CTOUCH display are turned off, when connecting the external device to the CTOUCH display.
- Check the plugs at the ends of the cables to make sure that they are the correct type, before plugging them into the jacks of the CTOUCH interactive display.

FIRST TIME INSTALLATION

When turning on the CTOUCH display for the first time, the below shown installation menu pages will appear on the screen.



Select the desired menu language. Press START to go to the next page.



Select your location and press NEXT to go to the next page.



Select your required Energy Saving Mode and press NEXT to finish the installation.

CONNECTING TO THE INTERNET

WIRED

Plug the LAN-cable into the LAN-port on the bottom of the CTOUCH display, to connect to the internet.

OTA UPDATE

When you connect your display to the internet, a notification will appear when a new firmware update is available.



Select the option you like.

Yes = See next photo.
No = The notification will not appear again until the next firmware update.

Later = The next time you turn on the display the notification will appear again.



Click 'Download' to download the firmware update. After the download is complete, the installation will start automatically. This will take about 10 minutes.