

# Quick Start Guide

Switch the CTOUCH  
interactive display on or off

Volume down (-)  
Volume up (+)


To confirm or enter a sub-menu  
or toggle between options  
during MENU operation.  
Use Arrow buttons to navigate  
in on- screen menu.  
(The OK button is equivalent to  
the left mouse click)

Display or exit the settings menu screen ▾  
Return to previous menu or exit the on-  
screen menu ■

Zoom in on Windows / OS




Zoom out on Windows / OS

Show the most-recently used Apps

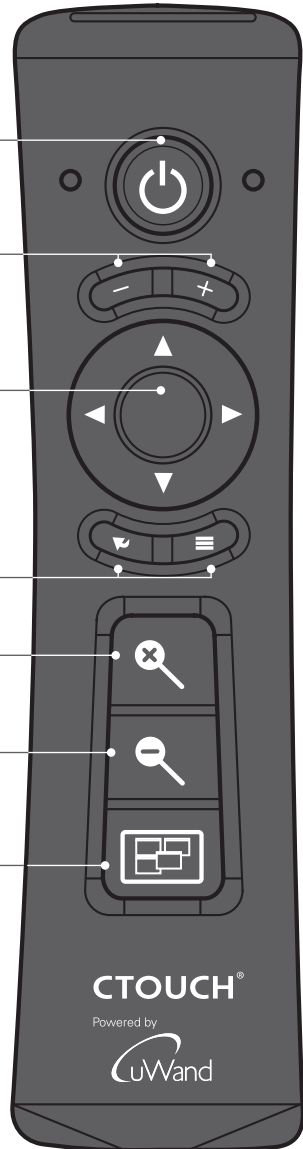

# CTOUCH®

uWand is an interactive gesture remote to control the CTOUCH from a short distance. This way you increase your reach by 12 armlenghts which enhances the CTOUCH display even more!

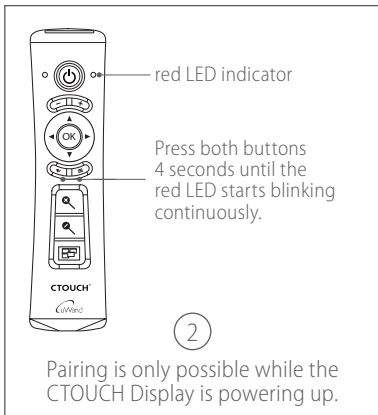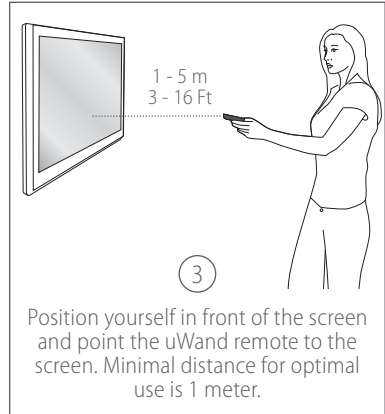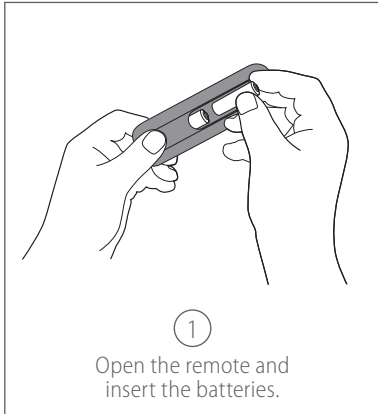

## Additional information

- When press directional keys no mouse cursor is available for 1,5 second due to switching profile. In this profile, the OK button becomes ENTER, After 1,5 second of no touching the directional keys it become a pointer again.
- Saving mode for battery. Turn the uWand remote upside down it goes into sleep.