

- screen. Touch once to control the





## B Password Chaose D Select Gateway Next Next choose your preferred one. *Note:* \* Recommended to select the **DHCP Client** 192.168.123.254 255.255.255.0 from your ISP. Static IP: If all Internet IP information is provided by your ISP, then choose Static IP. Next **DHCP Client \*:** Automatically obtain IP information from your ISP. If your ISP doesn't provide a designated IP for you, then choose DHCP Client. **PPPOE:** Ethernet Point to Protocol. Your ISP will provide you with Login ID and password. Usually this option is applicable to DSL service. PPTP: Point to Point Tunneling Protocol. Your ISP will provide you with Cancel «Back Next» Login ID and password. L2TP: Layer 2 Tunneling Protocol. Your ISP will provide you with Login ID and password. Usually this option is applicable to DSL service. Next ant GVUXUE and GVUXUE Finished Next 177\_2594 4009-0 2 Upper 2 assword Setting Format. ecommended to Vi-Fi Password of Internal select AP outer in the CTOUCH interactive display. (Password should be set at least 8 characters.)

Wired Network Setting

Get IP address. Setting successfully.

## **CTOUCH Internal PC module** (optional) **Quick Start Guide**



10.07 Webserrer × +		
te coste VES Accer J and Status des anticipation des anticipation Marcas Information Rocks Information Rocks Information Rocks Factory Settings	Except Ward The set of the set of the Mark of the set	a fra
	Next	
	*	
te contents Access Point Datus Select Language Selac Woold Operating Mode Wireles 70010 Femaleum	Operating Mode Yes sets setup officers modes for the LNA and MLAN interfaces for MAT and Dridg factors. © Gasesage In Diversified. Div denice connects to the seture the an	ng
Fierwal 005 Route Selup Management Reslart System	ADD_could Modern, Null 14 enabled and PCs to LAN point share the same IR Address to the B15 with and WAN point. To concertain type can be ating non the MAN page state concertain type can be ating non the MAN page state (DBM) disk. PT Viels. (LTP Address in state) VI Prior Model, all ethermed points and windress interfaces are bridged baptimes and the ATA function is induced. All WAN	
Hador Hoory Serings	Wireless 16F. Wireless 16F. Wireless 16F. Of the set	r en g

There are five methods to connect with network,

connection. Automatically obtain IP information







- select the appropriate port.



- Enable connection to a monitor or other external devices with

- Connect headphones to this jack. Audio output of the internal PC

- Enable connection to cable and log on to Internet access via Cable.
- USB standard interface, enable connection to USB2.0, USB3.0

(1) Note: 1. The internal PC module is multiple USB port designed (3.0, 2.0), when connect with USB device, please

 $2. \, The \, signal \, of \, Audio \, or \, Video \, output \, are \, the \, internal \, PC \, module \, generated.$ 

3. Before using the headset socket, please turn off the computer, headphones or other external audio devices to a proper volume, as excessive sound pressure can cause hearing loss.