

# HOW TO ACCESS THE DISPLAY LOCK MENU

1. Touch the Display menu icon.




2. Touch the Lock icon.



3. Touch an item in the lock menu to open the pop-up window.

4. Touch one of the white boxes to open the keyboard and input '0' four times.

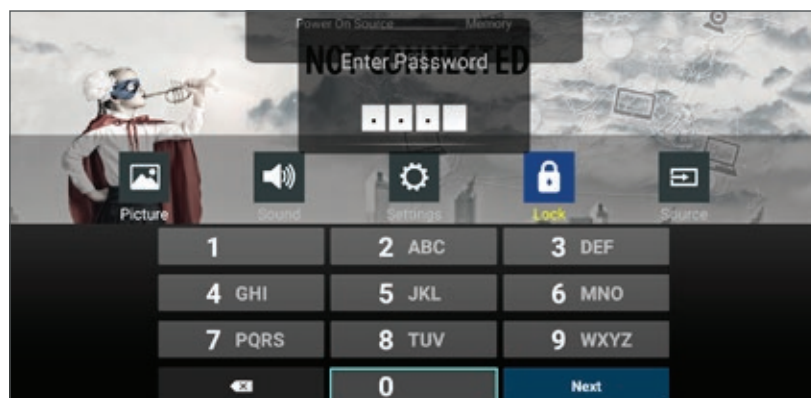

5. After entering the password, the keyboard will disappear and you will be able to alter the Lock menu settings.

