

QUICK START GUIDE

OPS PC MODULE


HEY YOU, START ME UP!

- 8th Gen Intel® Core™ processor family
- Dual Channel DDR4 2133Mhz SDRAM
- Intel UHD Graphics 6 Series
- M.2 2280 Solid State Drive
- Wireless 802.11 AC Certified
- Bluetooth 4.2
- HDMI 2.0 to the display
- USB 3.1 Type-C (CC/DP)


Share, inspire, have fun!
With CTOUCH by your side.

CTOUCH®

PACKING CHECKLIST

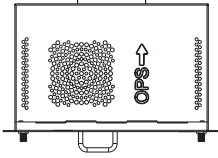

1 x OPS PC Module

 

2 x Wifi/BT Antenna


INSTALL OPS PC MODULE


STEPS


1. **Disconnect** the display from mains **power**.
2. Insert the OPS into the OPS slot. Make sure the **arrow** labelled '**front**' points to the front of the display. In this orientation the **vent holes** of the OPS PC is facing vent holes of the display.
3. **Reconnect** the mains **power** to the display.
4. If the display doesn't automatically restart after reconnecting the power, turn on both the display and OPS PC manually. Look for the **⏻**-icon on the OPS PC.
5. Select OPS/PC as **input source** on the display.

CAUTION!


Incorrect insertion can result in a defective OPS PC or display.

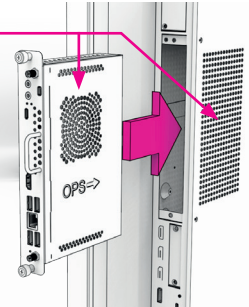

 For both **inserting** and **removing** the OPS, make sure to **disconnect the power** before doing so. (See step 1)

 Most CTOUCH displays provide the OPS PC with LAN if there is an **existing LAN connection** to the display.

CONNECTIVITY PANEL

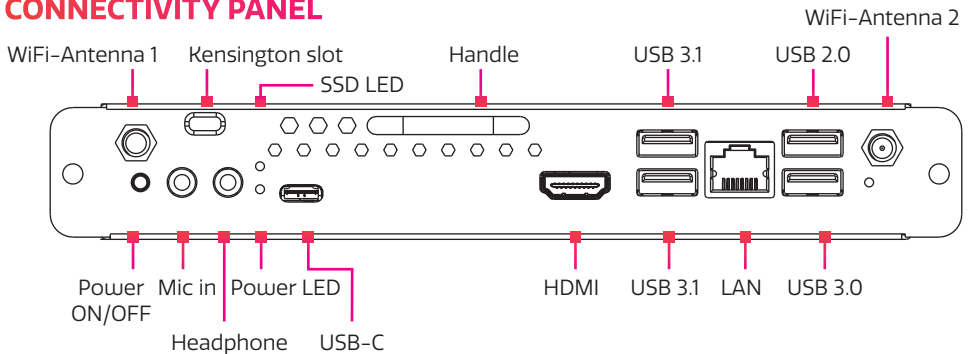

1505V200710 EN

Share, inspire, have fun!
With CTOUCH by your side.

www.ctouch.eu