



INSTALLATION / USER MANUAL
Radix Viso MDM


**HEY YOU,
LET ME
HELP!**

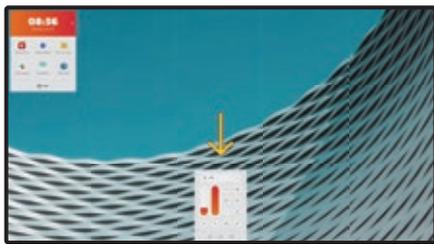


Open the Float Bar

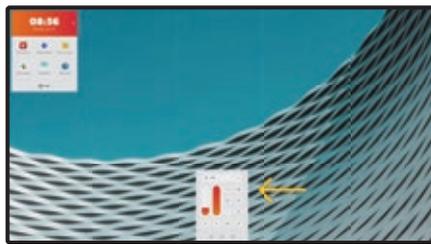


Go to the Settings Menu

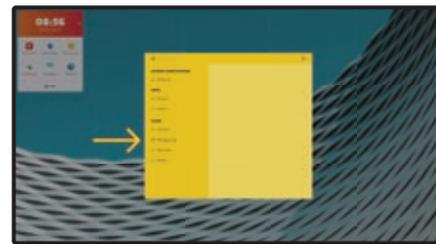


Go to Manage apps

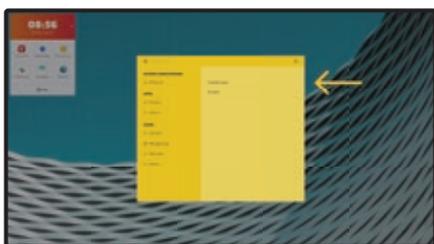

Go to Installed apps

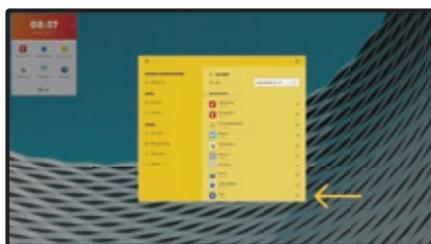

Select Viso

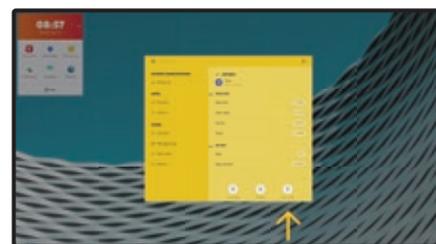


Select Clear data


Note: When opening this window for the first time, the overview might be empty. Go back by clicking on Manage apps and click on Installed Apps again.




Select Clear all data

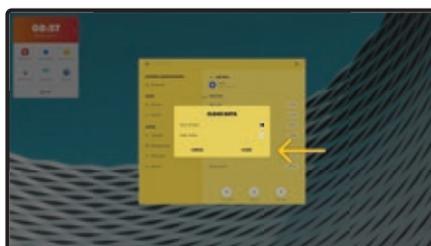


Press on Clear

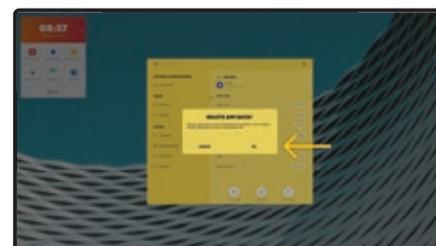

Press on OK

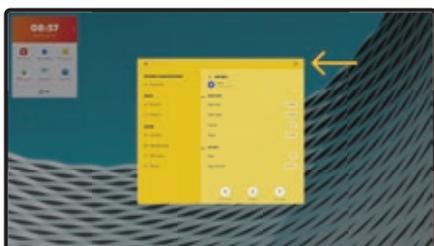


Close the Settings Menu

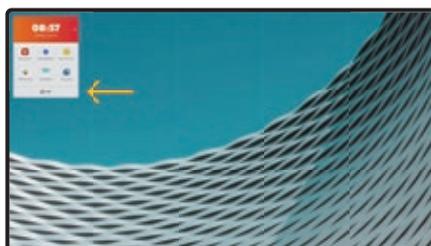


Open Apps




Open Viso

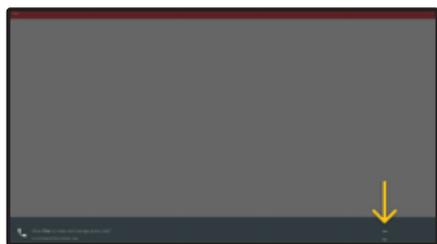

Press on Allow

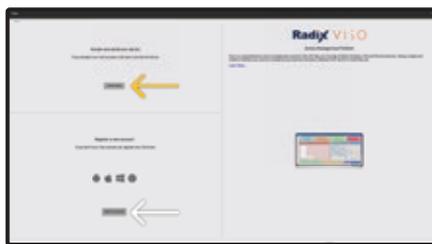


Press on 'Start here'.

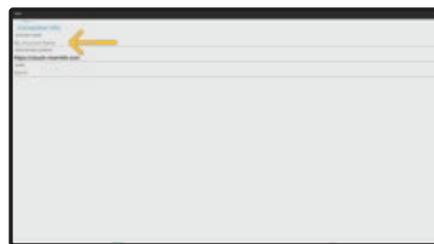


Fill in the account name

Note: If you do not have an account yet, press on 'create account' or go to **ctouch.visomdm.com** in your browser. After creating your account, continue from here.

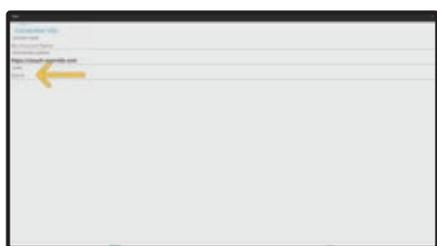


Fill in the name of the display


Note: Naming the display will help you recognize the screens later on in the dashboard.

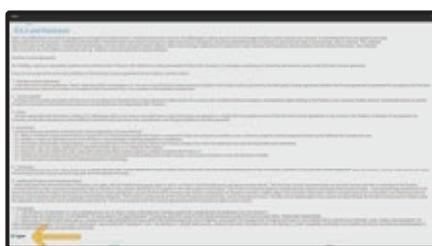

Tick the tick box

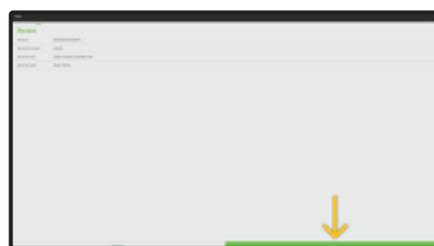

Press on Next

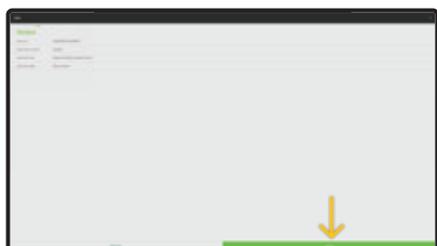


Press on Finish



Wait until the registration is finalised.

Note: A pop-up may appear. If so, click on 'Reset the Token' and fill in the required credentials to continue.

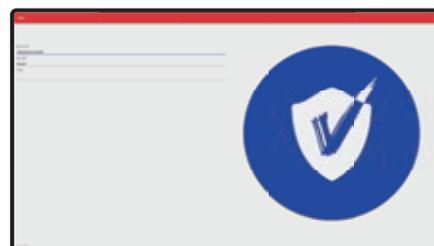

When you see this page, the registration has been finished successfully.



To log into your dashboard, you need to go to **ctouch.visomdm.com**
This can be done on any device with a browser and an internet connection.

For information about Radix, please look at <https://www.radix-int.com/viso-mdm-user-guides/>