

RS-232 PROTOCOL
CTOUCH Canvas

FOLLOW THE PROTOCOL

Share, inspire, have fun!
With CTOUCH by your side.

CTOUCH[®]

REVISION HISTORY

Date	Revision	Changes
2020-10-01	1.0	Launch



TABLE OF CONTENT

INHOUD	
REVISION HISTORY	2
TABLE OF CONTENT	3
INTRODUCTION	4
COMMUNICATION PROTOCOL	4
TRANSMISSION FORMAT	4
COMMAND DETAILED EXPLANATION	5
POWER CONTROL	5
PANEL BACK LIGHT UNIT CONTROL	6
VOLUME CONTROL	7
MUTE CONTROL	8
INPUT SOURCE CONTROL	9
INFRARED CONTROL	10
CTOUCH BUTTON	11
PICTURE MODE CONTROL	12
SOUND MODE CONTROL	13
ENERGY CONTROL	14
BACKLIGHT CONTROL	15
BAUD RATE CONTROL	16
FREEZE CONTROL	17
REMOTE CONTROL LOCK	18
TOUCH LOCK	19
ANNEX A	22
ANNEX B	22



INTRODUCTION

This document represents simple UART protocol for controlling system operation using RS-232C.

COMMUNICATION PROTOCOL

RS-232C Pin Map


1	N.C.
2	TxD
3	RxD
4	N.C.
5	GND
6	N.C.
7	N.C.
8	N.C.
9	N.C.

Communication parameter

baud rate : 9600

data : 8

parity : NONE stop bit : 1

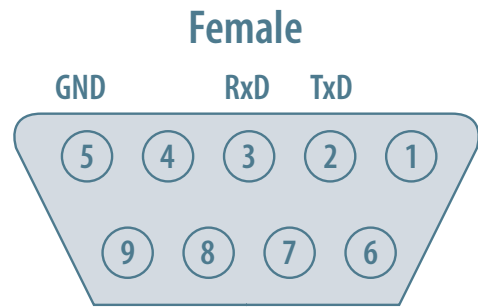

Communication general spec

- ID should show hexadecimal value of assigned ID.
- ID should be set on menu of the display.
- If you want to control every mechanism connected with Serial Cable regardless of its ID, set ID to « 0x00 » and send commands.

Then each SET will follow commands but it will not respond without ACK.

- Don't use 0x00, 0x8A(138) and 0xA9(168) for Set ID.

TRANSMISSION FORMAT

START	COMMAND	ID	DATA	DATA
0xA9	0xFF		0xFF	0x8A

For example Power on & ID = 0x11

START	COMMAND	ID	DATA	DATA
0xA9	0x11		0x01	0x8A

COMMAND DETAILED EXPLANATION

POWER CONTROL

⊖ Power Control

■ Function

RS-232 Controller turns display power ON/OFF

⊖ Get Power ON/OFF status

START	COMMAND	ID	DATA	END
0xA9	0x11		0xAA	0x8A

⊖ Get Power ON/OFF*

START	COMMAND	ID	DATA 1	END
0xA9	0x11		Power	0x8A

Power: Power code to be set on display

0x01	Power ON
0x00	Power OFF

⊖ Ack

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	0x11		Power	0x8A	0x8A

A=0x41

Power: Power code to be set on display

0x01	Power ON
0x00	Power OFF

⊖ Nak

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	N		Power	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc

* The Power ON command only works with DB9 cable. For Power ON over IP use a tool with magic package.



PANEL BACK LIGHT UNIT CONTROL

- ✓ **Panel Back Light Unit Control**
■ **Function**
RS-232 Controller turns display panel BLU power On/Off.

- ✓ Get BLU Power ON/OFF status

START	COMMAND	ID	DATA	END
0xA9	0x12		0xAA	0x8A

- ✓ Set BLU Power ON/OFF

START	COMMAND	ID	DATA 1	END
0xA9	0x12		BLU Power	0x8A

BLU Power: BLU Power code to be set on display

0x01	Power ON
0x00	Power OFF

- ✓ Ack

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	A		0x12	BLU Power	0x8A

A=0x41

Power: Power code to be set on display

0x01	Power ON
0x00	Power OFF

- ✓ Nak

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	N		0x12	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



VOLUME CONTROL

✓ **Volume control**

■ **Function**
Personal Computer changes volume of display

■ **Get Volume status**

START	COMMAND	ID	DATA	END
0xA9	0x13		0xAA	0x8A

■ **Set Volume**

START	COMMAND	ID	DATA 1	END
0xA9	0x13		Volume	0x8A

Volume:

Volume value code (0x0 (0) ~ 0x64 (100)) to be set on display

7

■ **Ack**

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	A		0x13	Volume	0x8A

A=0x41

Volume: Same as above

■ **Nak**

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	N		0x13	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



MUTE CONTROL

☑ **Mute control**

■ **Function**
RS-232 Controller set mute On/Off.

■ Get Mute ON/OFF status

START	COMMAND	ID	DATA	END
0xA9	0x14		0xAA	0x8A

■ Set Mute ON/OFF

START	COMMAND	ID	DATA	END
0xA9	0x14		Mute	0x8A

Mute: Mute code to be set on display

0x01	Mure ON
0x00	Mure OFF

8

■ Ack

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	A		0x14	Mute	0x8A

A=0x41

Mute: Same as above

■ Nak

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	N		0x14	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



INPUT SOURCE CONTROL

Input source control

Function

RS-232 Controller changes input sources of display.

Get Input Source status


START	COMMAND	ID	DATA	END
0xA9	0x15		0xAA	0x8A

Set Input Source

START	COMMAND	ID	DATA	END
0xA9	0x15		Mute	0x8A

Input: Input source code to be set on display

DATA	INPUT
DP	0x07
HDMI 1	0x05
HDMI 2	0x06
HDMI 3	0x08

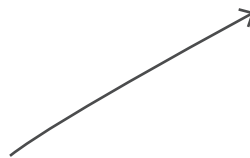

DATA	INPUT
INSIDE PC	0x09
CTOUCH Module*	0x0D
USB-C	0x0E
VGA	0x14

* Only when a CTOUCH Module is inserted in the display.

Note: When switching to same source the display will respond after 3 seconds. We recommend to implement a get input source command.

Ack

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	A		0x15	BLU Power	0x8A

A=0x41

Input: Same as above

Nak

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	N		0x15	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



INFRARED CONTROL

☑ Infrared control

■ Function Command for same thing with remote controller

■ Command Infrared control

START	COMMAND	ID	DATA	END
0xA9	0x16		Key Code	0x8A

Key Code: Infrared control code as Annex B

■ Ack

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	A		0x16	Key Code	0x8A

Key Code: Same as annex B

■ Nak

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	N		0x16	ERR	0x8A

Key Code: Same as annex B

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



CTOUCH BUTTON

✓ CTOUCH button

■ **Function**
RS-232 Controller set CTOUCH button On/Off.

■ Get CTOUCH button On/Off status

START	COMMAND	ID	DATA	END
0xA9	0x17		0xAA	0x8A

■ Set CTOUCH button On/Off

START	COMMAND	ID	DATA	END
0xA9	0x17		Lock	0x8A

CTOUCH button: CTOUCH button code to be set on display

0x01	CTOUCH button ON
0x00	CTOUCH button OFF

11

■ Ack

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	A		0x17	Lock	0x8A

A=0x41

Lock: Same as above

■ Nak

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	N		0x17	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



PICTURE MODE CONTROL

✓ **Picture mode control**

■ **Function**
RS-232 Controller changes picture mode of display.

■ **Get Picture Mode status**

START	COMMAND	ID	DATA	END
0xA9	0x18		0xAA	0x8A

■ **Set Picture Mode**

START	COMMAND	ID	DATA	END
0xA9	0x18		Mode	0x8A

Picture Mode: Picture Mode code to be set on display

DATA	INPUT
Dynamic	0x00
Standard	0x01
Soft	0x02
User	0x03

12

■ **Ack**

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	A		0x18	Input	0x8A

A=0x41

Input: Same as above

■ **Nak**

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	N		0x18	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



SOUND MODE CONTROL

✓ **Sound mode control**

■ **Function**
RS-232 Controller changes sound mode of display.

■ Get Sound Mode status

START	COMMAND	ID	DATA	END
0xA9	0x19		0xAA	0x8A

■ Set Sound Mode

START	COMMAND	ID	DATA	END
0xA9	0x19		Mode	0x8A

Sound Mode: Sound Mode code to be set on display

DATA	INPUT
Standard	0x00
Music	0x01
Movie	0x02
Sport	0x03
User	0x04

13

■ Ack

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	A		0x19	Input	0x8A

A=0x41

Input: Same as above

■ Nak

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	N		0x19	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



ENERGY CONTROL

✓ Energy Control

■ Function RS-232 Controller changes Energy Mode.

■ Get Energy Mode Control On/Off Status

START	COMMAND	ID	DATA	END
0xA9	0x30		0xAA	0x8A

■ Set Energy Mode Control On/Off

START	COMMAND	ID	DATA	END
0xA9	0x30		Energy Mode	0x8A

Energy Mode: Energy Mode code to be set on display

14

0x00	Off	0x03	ECO friendly
0x01	Auto	0x04	Dynamic
0x02	Balanced		

■ Ack

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	A		0x30	Energy Mode	0x8A

A=0x41

Lock: Same as above

■ Nak

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	N		0x30	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



BACKLIGHT CONTROL

✓ **Backlight control**

■ **Function**
RS-232 Controller changes Backlight intensity.

■ Get Backlight status

START	COMMAND	ID	DATA	END
0xA9	0x31		0xAA	0x8A

■ Set Backlight

START	COMMAND	ID	DATA 1	END
0xA9	0x31		Backlight	0x8A

Backlight:

Backlight value code (0x0 (0) ~ 0x64 (100)) to be set on display

15

■ Ack

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	A		0x13	Backlight	0x8A

A=0x41

Backlight: Same as above

■ Nak

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	N		0x13	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



BAUD RATE CONTROL

✓ **Baud Rate Control**

■ **Function**
RS-232 Controller changes baud rate.

■ Get Baud Rate


START	COMMAND	ID	DATA	END
0xA9	0x1A		0xAA	0x8A

■ Set Baud Rate

START	COMMAND	ID	DATA	END
0xA9	0x1A		BaudRate	0x8A

Baud Rate: Baud Rate code to be set on display

DATA	INPUT
BAUD_2400	0x01
BAUD_4800	0x02
BAUD_9600	0x03
BAUD_19200	0x04

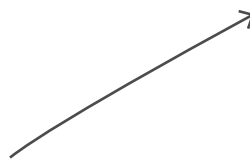

DATA	INPUT
BAUD_38400	0x05
BAUD_57600	0x06
BAUD_115200	0x07

16

■ Ack

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	A		0x1A	Input	0x8A

A=0x41

Input: Same as above

■ Nak

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	A		0x1A	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



FREEZE CONTROL

Freeze Control

Function RS-232 Controller set Freeze Control On/Off.

Get Freeze Control On/Off Status

START	COMMAND	ID	DATA	END
0xA9	0x1B		0xAA	0x8A

Set Freeze Control On/Off

START	COMMAND	ID	DATA	END
0xA9	0x1B		Freeze	0x8A

Freeze: Freeze code to be set on display

0x01	Freeze ON
0x00	Freeze OFF

17

Ack

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	A		0x1B	Freeze	0x8A

A=0x41

Lock: Same as above

Nak

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	N		0x1B	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



REMOTE CONTROL LOCK

Remote Control Lock

Function

RS-232 Controller set Remote Control Lock On/Off.

Get Remote Control Lock On/Off Status

START	COMMAND	ID	DATA	END
0xA9	0x1D		0xAA	0x8A

Set Remote Control Lock On/Off

START	COMMAND	ID	DATA	END
0xA9	0x1B		IR Lock	0x8A

IR Lock: Enable/disable remote control usage

0x00	IR Lock ON
0x01	IR Lock OFF

18

Ack

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	A		0x1D	IR Lock	0x8A

A=0x41

Lock: Same as above

Nak

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	N		0x1D	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



TOUCH LOCK

☑ Touch Lock

■ **Function**
RS-232 Controller set Touch Lock On/Off.

■ Get Touch Lock On/Off Status

START	COMMAND	ID	DATA	END
0xA9	0x1E		0xAA	0x8A

■ Set Touch Lock On/Off

START	COMMAND	ID	DATA	END
0xA9	0x1E		Touch Lock	0x8A

Touch Lock: Enable/disable Touch Lock

19

0x00	Touch Lock ON
0x01	Touch Lock OFF

■ Ack

START	ACK/NAK	ID	R-CMD	DATA 1	END
0xA9	A		0x1E	Touch Lock	0x8A

A=0x41

Lock: Same as above

■ Nak

START	ACK/NAK	ID	R-CMD	DATA	END
0xA9	N		0x1E	ERR	0x8A

N=0x4E

ERR:

0x01	Invalid Command
0x02	Invalid Data
0xFF	Etc



ANNEX A

NO.	COMMAND	DATA	END
1	Power Control	0x11	
2	BLU Power Control	0x12	0x0 ~ 0x1
3	Volume Control	0x13	0x0 ~ 0x64
4	Mute Control	0x14	0x0 ~ 0x1
5	Input Source Control	0x15	Input source
6	Infrared Control	0x16	Infrared control value
7	CTOUCH button Control	0x17	0x00-0x01
8	Picture Mode Control	0x18	0x00-0x06
9	Sound Mode Control	0x19	0x00-0x04
10	Baud Rate Control	0x1A	0x00-0x07
11	Freeze Control	0x1B	0x00-0x01

ANNEX B

KEY NAME	KEY CODE	DESCRIPTION
RC_POWER	0xD7	Power
RC_INPUT	0xC0	Input Source Menu
RC_CURSOR_UP	0x92	Cursor Up
RC_CURSOR_LEFT	0x97	Cursor Left
RC_ENTER	0x9B	Enter
RC_CURSOR_RIGHT	0x9F	Cursor Right
RC_CURSOR_DOWN	0xD8	Cursor Down
RC_MENU	0x84	Menu
RC_HOME	0xBC	Discrete HOME
RC_EXIT	0xD4	Back/Exit
RC_STILL	0xB8	Picture Freeze
RC_MUTE	0xDF	Audio Mute
RC_BACKLIGHT_MUTE	0xB2	Backlight Mute
RC_VOL_DN	0x86	Volume Down
RC_VOL_UP	0x83	Volume Up

